


## SAFETY CHECKLIST

- Always use protective gloves, long sleeve shirt, long pants, boots and OSHA approved protective eyewear.
- Always use the torch in a safe area, free from all combustibles and flammable liquids & vapors.
- Always have an ABC type fire extinguisher within 25ft of your work area.
- Always keep the propane gas supply cylinder in an upright position.



**NEVER LAY THE PROPANE CYLINDER DOWN!**

- Never operate the torch when a gas leak is present, or gas odor is detected.
- Never leave a burning torch unattended.

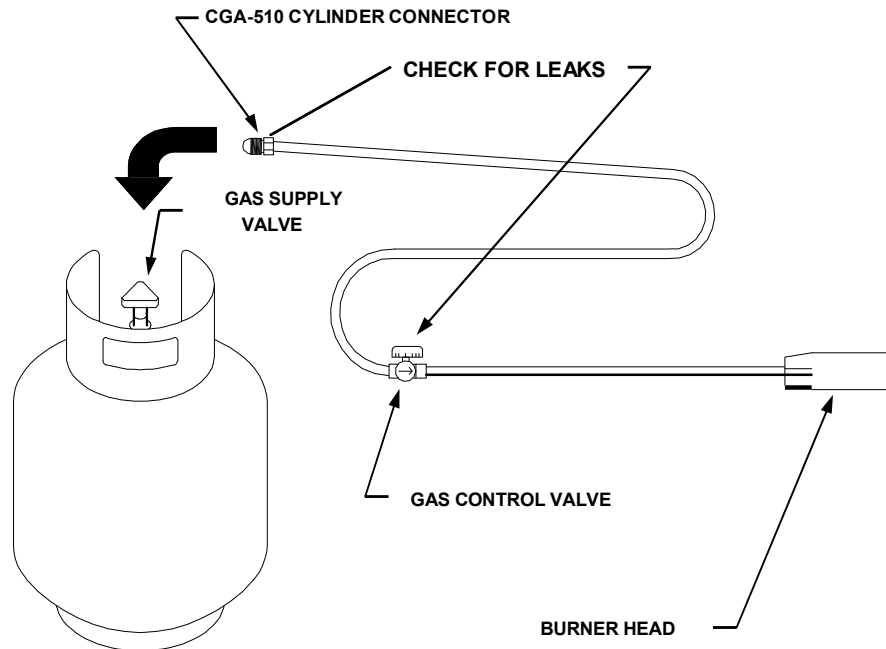

**burners, inc.**

PO Box 735 • Milford • MI • 48381  
www.burnersinc.com • info@burnersinc.com

For Technical Support :  
1-800-878-2876 • techsupport@burnersinc.com

U.S. Veteran Owned & Operated  
**burners, inc.**  
Combustion Technology and Custom Metal Fabrication

## Vapor Propane Hand Torch INSTRUCTION MANUAL

For Torch Models:

FV-5, FV-10, FV-11 and FV-12 Torch Kits



FV-11-K Torch Kit Shown



# IMPORTANT




*Please read all instructions before  
attempting to operate this torch.*


*Failure to follow all instructions may result in bodily injury*


## FOR YOUR SAFETY - If you smell gas:

- Shut off all gas supplies.
- Extinguish all open flames.
- Contact a qualified gas service technician for assistance.

 **This torch will produce extremely hot flames, and will cause severe burns to exposed skin.**

 **You must always use hand and eye protection when using this torch. It is recommended that you use OSHA approved eye protection and leather gloves whenever using this torch.**

 **DO NOT use this torch in any area containing flammable vapors such as gasoline, paint thinner, or degreaser.**

 **DO NOT use this torch near flammable material such as dead & dry weeds, pine needles, sawdust, & paper.**

- This torch is only intended for outdoor use only.
- This torch is designed for use with a vapor withdrawal LPG (propane type CGA-510) cylinder only.
- Only allow properly trained adults to operate this torch.
- Do not allow children to operate this torch.

## SET-UP INSTRUCTIONS

### Before you begin ...

Inspect all material for damage.

Make sure all brass connectors are free from breaks or damage.

Make sure torch assembly is not bent or broken.

 **DO NOT USE THIS TORCH IF ANY PART IS DAMAGED OR BROKEN**

You must provide a LPG vapor withdrawal propane supply cylinder. This cylinder must be approved by the US Department of Transportation for propane service.

Make sure the supplied hose and the CGA-510 cylinder connector are secured together (refer to illustration on back cover).

Connect the other end of the hose to the gas control valve on the torch. This connection DOES NOT require the use of any thread sealant, and has left handed threads. It requires an 11/16" open end wrench to fasten correctly.

Inspect the O-ring (if applicable) on the CGA-510 cylinder connector fitting, on the LPG (propane) pressure regulator, for damage. If damaged, do not use the torch. Replace the O-ring.

Connect the CGA-510 cylinder connector fitting to the LPG withdrawal propane supply cylinder. (Refer to illustration)

 **DO NOT OVER TIGHTEN**

Make sure the torch control valve is turned completely OFF (fully clockwise). *SLOWLY* open the gas valve on the propane supply cylinder. Immediately check for any gas leaks on the torch control valve, the gas hose, and the CGA-510 tank connector fitting using a soapy water or suitable gas leak detection solution (available at your local LP Gas Retailer).

 **DO NOT USE A MATCH OR ANY OTHER OPEN FLAME TO DETECT FOR GAS LEAKS.**

 **DO NOT OPERATE OR ATTEMPT TO LIGHT OR OPERATE THIS TORCH IF THERE IS ANY EVIDENCE OF A GAS LEAK OR YOU SMELL GAS.**

If a leak is discovered, immediately turn OFF the gas valve on the propane cylinder.

## LIGHTING INSTRUCTIONS

### Before you begin ...


Make sure you have followed the SET-UP INSTRUCTIONS completely.

*SLOWLY* open the gas valve on the propane supply cylinder. Check all connections on the torch, hose and cylinder for leaks, using a soapy water solution or a suitable gas leak detection solution (available from your local LP Gas supplier). Watch all connections carefully. If bubbles appear, a leak is present in that area. Shut OFF the gas supply valve on the propane cylinder.

 **DO NOT OPERATE OR ATTEMPT TO LIGHT OR OPERATE THIS TORCH IF A LEAK IS PRESENT.**

Open the gas control valve on the torch 1/8 of a turn, or until a small amount of gas begins to escape from the torch. Using the flint striker supplied with your torch kit, ignite the gas at the burner head end of the torch.

 **NEVER USE A MATCH OR CIGARETTE LIGHTER TO IGNITE THE GAS – THIS CAN LEAD TO SERIOUS BURNS AND INJURIES**

 **DO NOT ATTEMPT TO IGNITE THE GAS FOR MORE THAN FIVE (5) SECONDS**

If you cannot light the torch within 5 seconds, turn OFF both the gas control valve on the torch and the gas supply valve on the propane cylinder. Adjust the size of the flame by using the adjusting knob on the LP (propane) pressure regulator or gas control valve on the torch.

## IMPORTANT PERFORMANCE NOTE

The CGA-510 cylinder connector may be equipped with a safety device known as an *Excess-Flow Safety Check*. This safety device prevents large amounts of propane from escaping if there is a hose failure. **This safety device may activate when you first turn ON the propane gas supply.** To correct this problem, simply close the propane gas supply valve on the propane cylinder, wait 15 seconds, and then very slowly open the propane supply valve. This should return the torch system to a normal performance level.

If your torch is still not performing at a normal level, have your local propane supplier verify that your propane supply cylinder is operating correctly.

If your torch is still not performing at a normal level, have your local propane supplier verify that your propane supply cylinder is operating correctly.

## SHUT-OFF INSTRUCTIONS

Turn OFF the valve on the gas supply cylinder first. Allow all of the gas to burn completely and the flame to extinguish at the burner head. Turn OFF the gas control valve on the torch.